


Manual Override Type ITG 050-080, OPERATION MANUAL




MANUAL OVERRIDE OPERATION

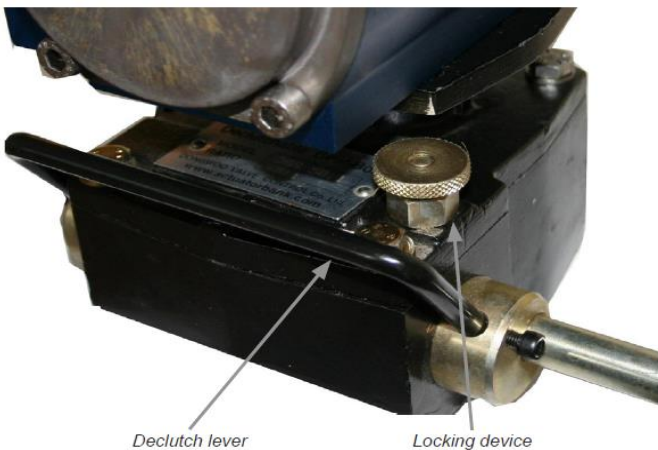

1. Pull the locking device upwards and move the declutch lever upwards, if it's stuck try moving the wheel a little and try again.
2. When the declutch lever reaches its highest position the locking device "clicks" and locks it in this position. The declutch lever affects a decompression valve that depressurize the actuator and makes manual operation possible.

STANDARD OPERATION

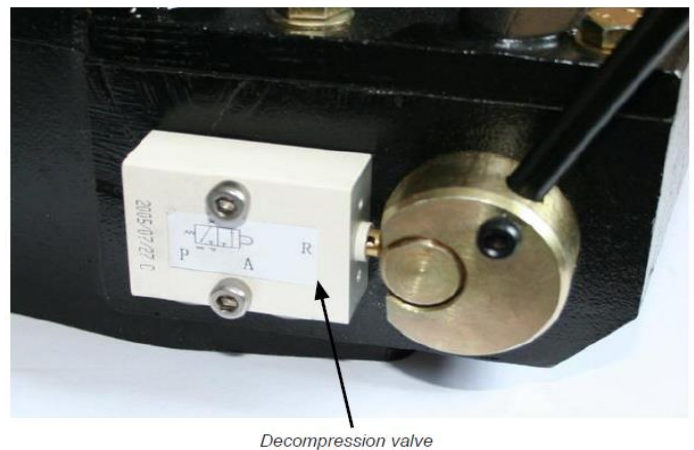

1. Pull the locking device upwards and move the declutch lever downwards, if it's stuck try moving the wheel a little and try again.
2. When the declutch lever reaches its lowest position the locking device "clicks" and locks it in this position. The declutch lever no longer affects the decompression valve there for the actuator is now pressurized and ready to be operated.